

# Installation Guide

**NEWSTAR**  
computerproducts

[www.newstar.nl](http://www.newstar.nl)

## UNIVERSAL PLASMA/LCD DISPLAY MOBILE STAND



Model:  
PLASMA-M1800

# Important Notes

- Thank you for purchasing the Mobile Stand. This Mobile Stand is feasible for most models of 42" and 50" wide plasma display units.
- To ensure correct usage, please read this instruction manual thoroughly. Keep this manual for future reference.
- BRACKETS SHOULD BE MOUNTED ONLY BY A QUALIFIED INSTALLER.
- User will be responsible for any injuries and damages that may arise from improper installation and mishandling of Mobile Stand.
- Ensure all mounting screws are appropriately positioned and properly tightened/fastened.
- Installers are to ensure customer's safety when installing.
- We reserve the right to amend or undertake any necessary changes without prior notice.



## **WARNING**

This symbol indicates the incorrect handling. Ignoring this symbol can result in the possibility of personal injury or even death.



## **CAUTION**

This symbol indicates the incorrect handling. Ignoring this symbol can result in the possibility of personal injury and physical damage.



This symbol indicates additional cautions (including warnings).



This symbol indicates forbidden actions.



This symbol indicates required actions.



Caution  
(general)




Forbidden  
(general)




Required  
(general)

# Parts Specifications

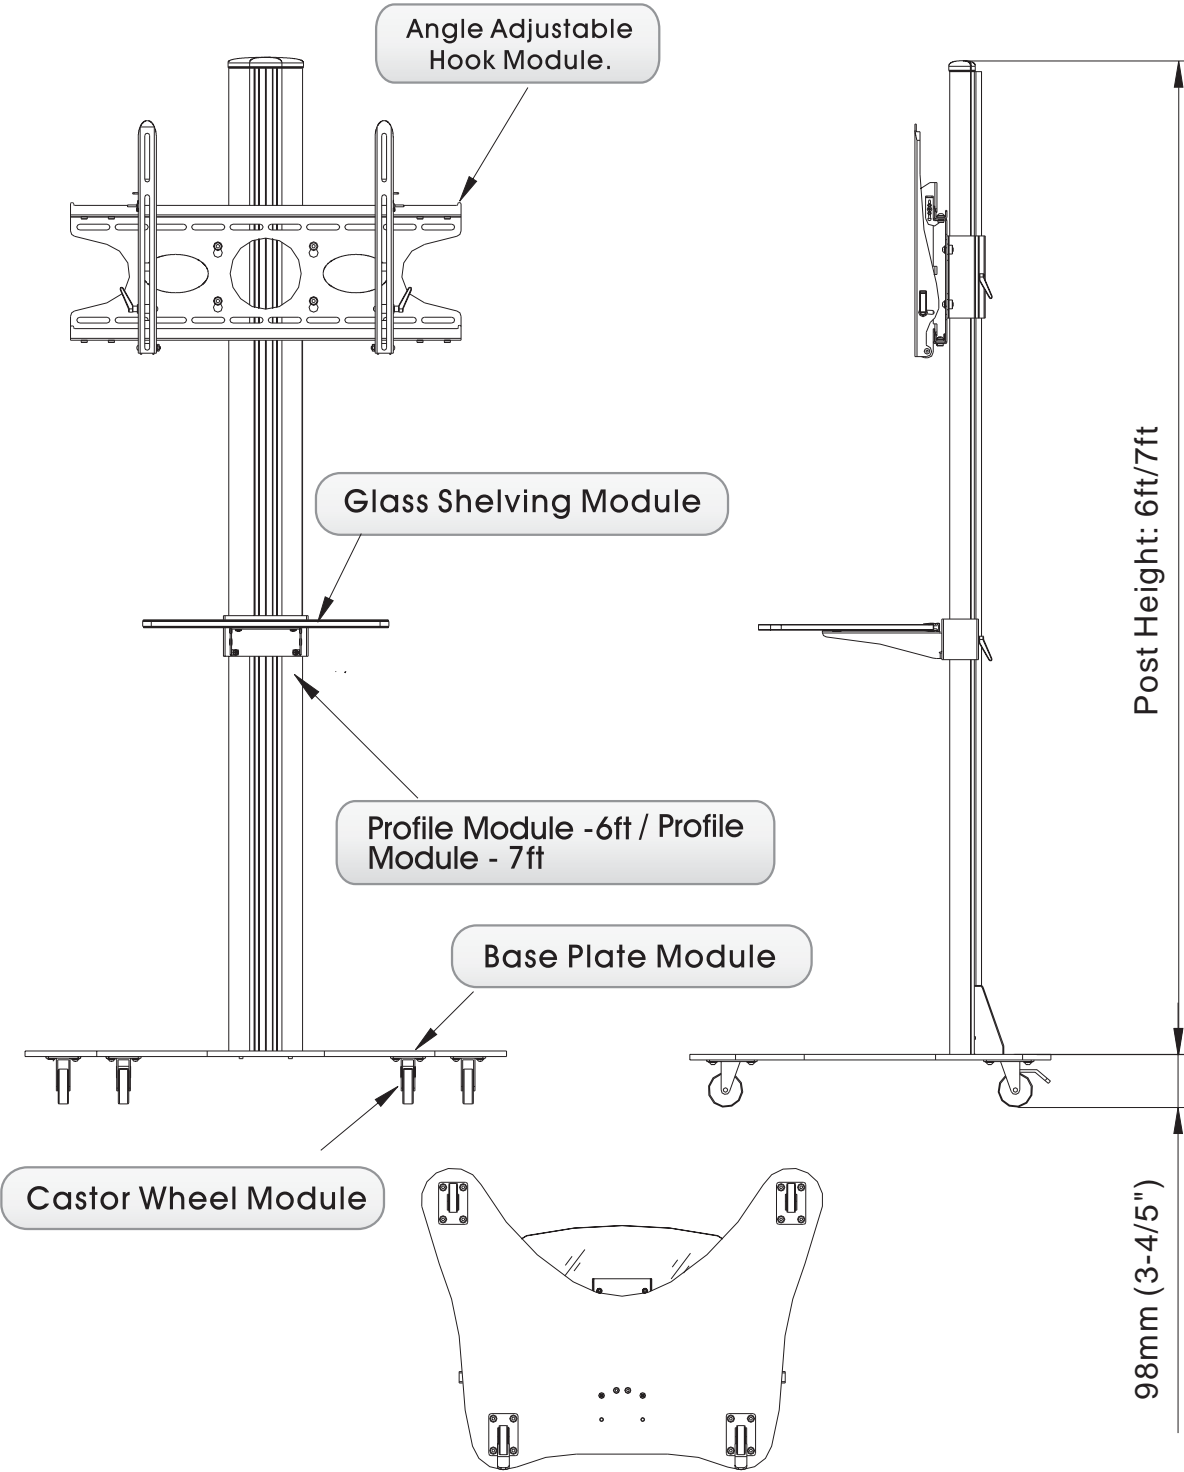


# ! WARNING


- Assembling without the use of bolts and screws at designated points may result in injury and damage to properties or the unit collapsing from its installed position. Should a malfunction occur disconnect the power from the main socket and surround the area with ropes to prevent others from getting near it.

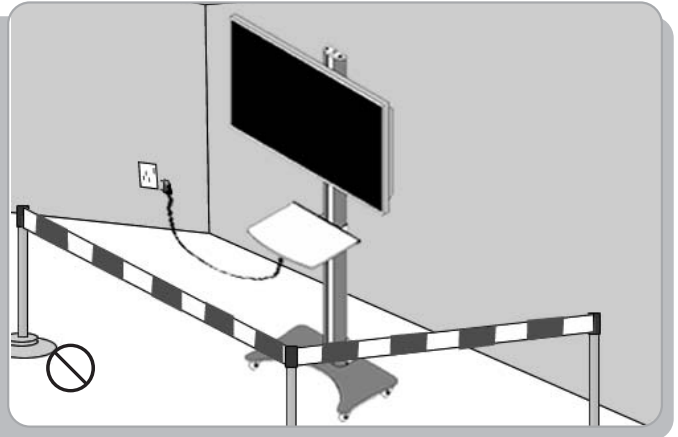

- Do not push the top of the Mobile Stand.
- It is strongly recommended that the plasma is removed when shifting the Mobile Stand from one place to the other.

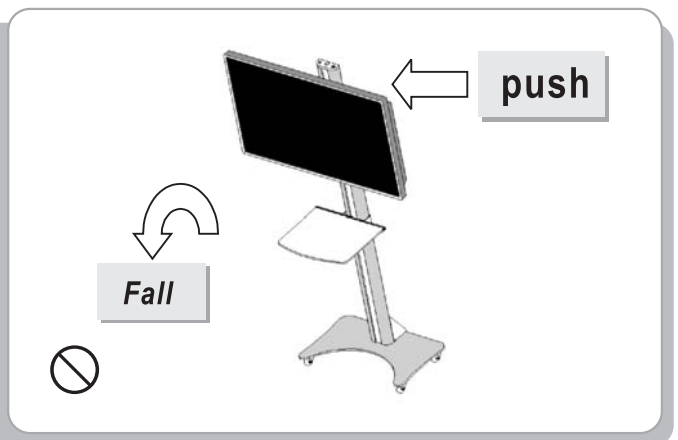

- It is strongly recommended that two persons carry out the installation.
- When adjusting angles or carrying out maintenance, disconnect the power supply to avoid electrical shock.

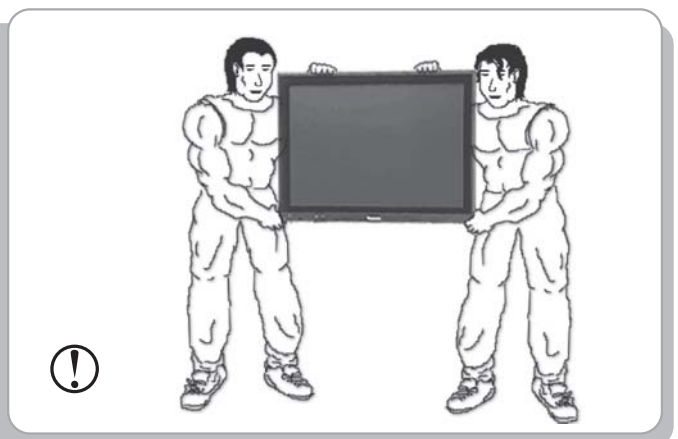


# ⚠ CAUTION


- Do not remove any bolts and screws from the Mobile Stand or do any changes to the Mobile Stand.




- Do not install near an air-conditioner.
- Do not place at a place where there are excessive dust and smoke as fire could arise from these sources.

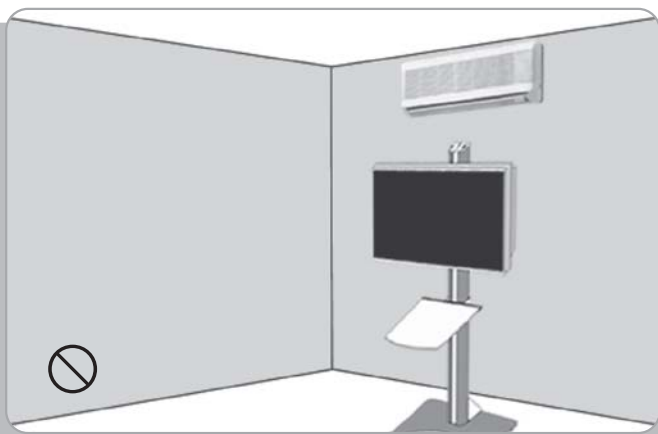

- Do not place on sloping surface. Strictly install on a vertical surface only.
- Lock the brake of the wheels after position is decided.

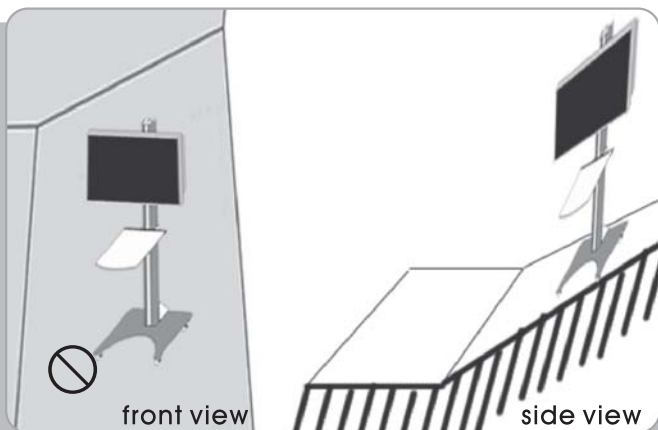


- Keep the room well ventilated to prevent room temperature rising and possibilities resulting in fire

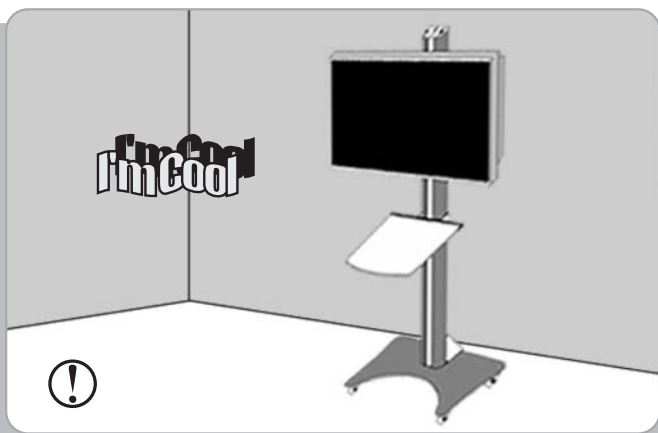

# **CAUTION**


- Do not place in location where room temperature and humidity are excessively high.
- To prevent fire, avoid contact with water.

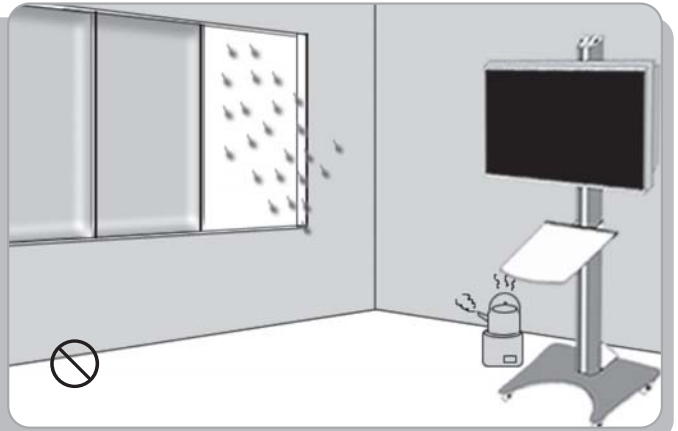

- Do not apply unnecessary stress or load on the installed unit.




- Do not place where there is direct sunlight or strong light to prevent eye fatigue when using the unit.

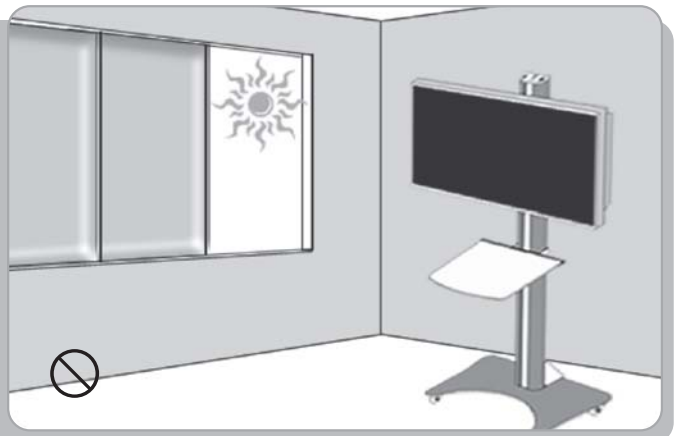


# Package Contents


## 1. Angle Adjustable Plate and Hook Module:

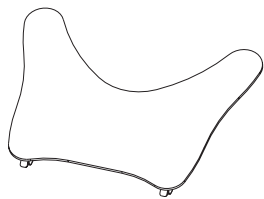


Part 1  
Base plate and Wheel Assembly---1set

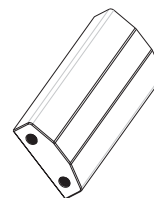


Part 2  
Fixed Pole-----1pcs

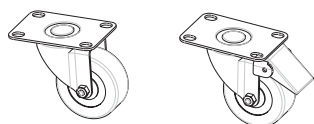


Part 3  
Castor Wheel (Brake)-----2 pcs  
Castor Wheel (Swivel)-----2 pcs

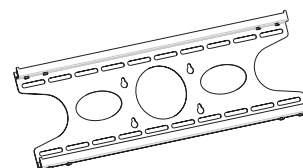


Part 4  
Wall Plate & "U" Plate Assembly---1set

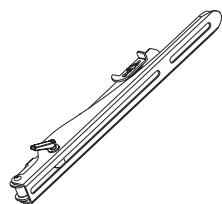


Part 5  
Left Pivot Arm Assembly-----1set

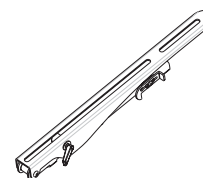


Part 6  
Right Pivot Arm Assembly-----1set

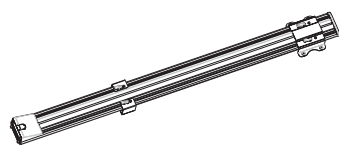


Part 7  
Plasma Profile Assembly-----1set

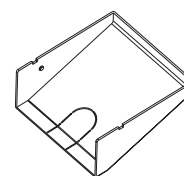

Part 8  
Support Angle Cover-----1pcs

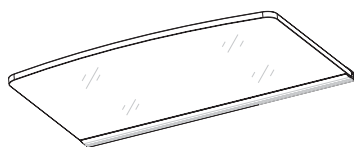


Part 9  
Glass Plate Assembly -----1set

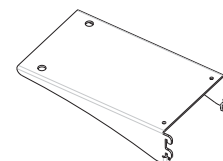


Part 10  
Sheiving Bracket-----1pcs


# Package Contents

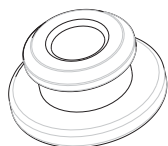


Part 11  
Rubber Support-----2pcs

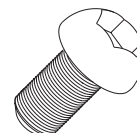


Part 12  
Button Head Cap Screw  
M8X12-----2pcs

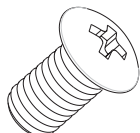


Part 13  
Truss Head Screw  
M4X7-----4pcs

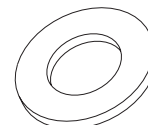


Part 14  
Washer  
Ø4-----4pcs  
Ø4-----2pcs

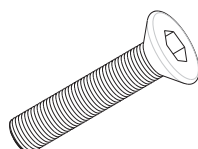


Part 15  
Countersunk Cap Screw  
M6X30-----2pcs

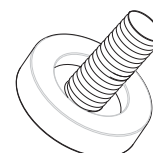


Part 16  
Adjustable pad-----4pcs




Part 17  
Allen Wrench  
Ø2.5-----1pc    Ø3-----1pc  
Ø4-----1pc    Ø5-----1pc

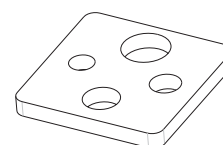

Part 18  
Square Washer-----6pcs




Part 19  
Truss Head Screw  
M4X15/M4X20/M4X30-----6pcs each  
M5X15/M5X20/M5X30-----6pcs each  
M6X15/M6X20/M6X30-----6pcs each  
M8X15/M8X45-----6pcs each

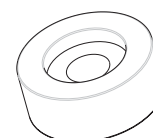

Part 20  
Spacer I-----6pcs



# Package Contents

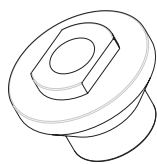


Part 21  
Spacer II-----


## Installation Guide

### 1. Assembling the Mobile Stand


1

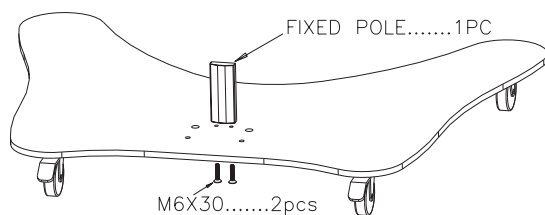

2

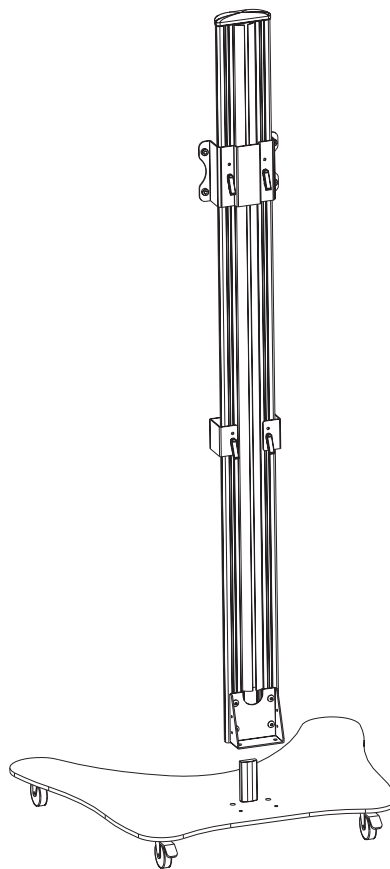


3

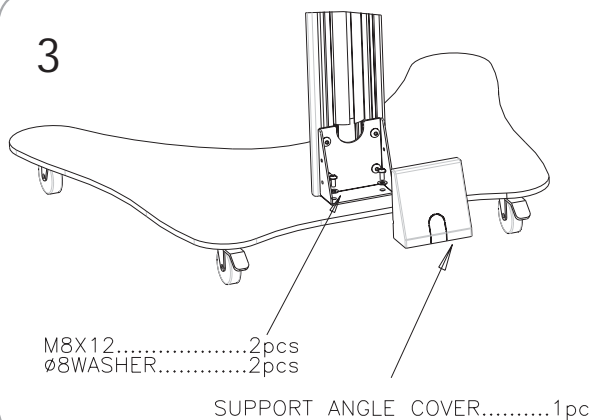


# Installation Guide

## 1. Assembling the Mobile Stand


4

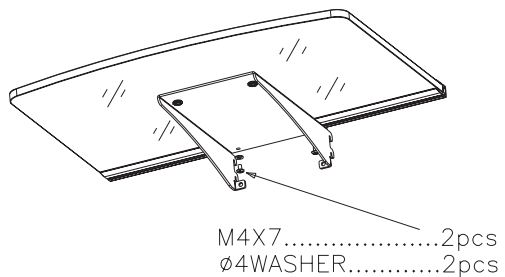


6

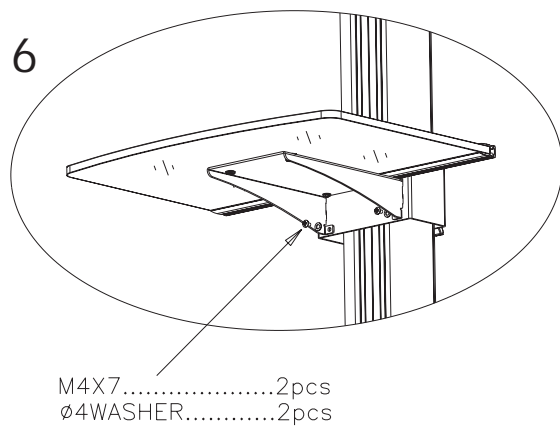


7

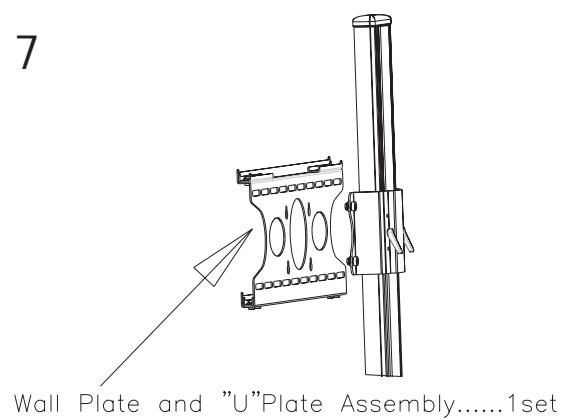

5

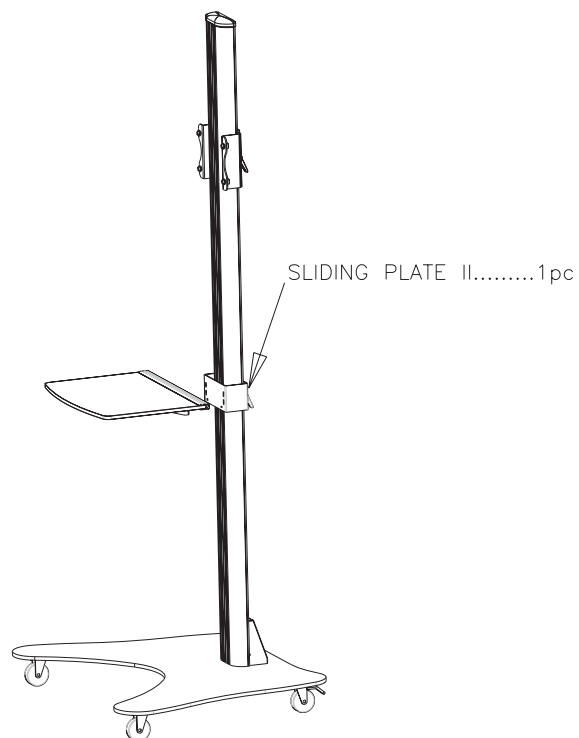

8

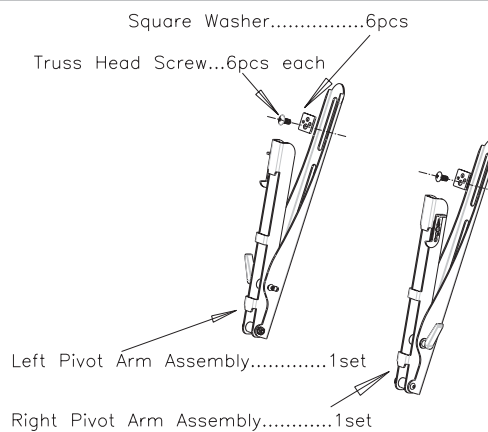


# Installation Guide

## 1. Assembling the Mobile Stand



9 Left Pivot Arm Assembly.....1set

Right Pivot Arm Assembly.....1set

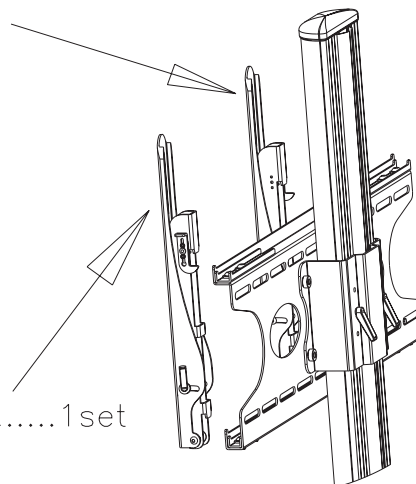


## 2. Placing and Fixing the Plasma Unit

⚠ Please refer to the documentation that comes with the plasma display unit, to ensure that the correct size of screw is used.

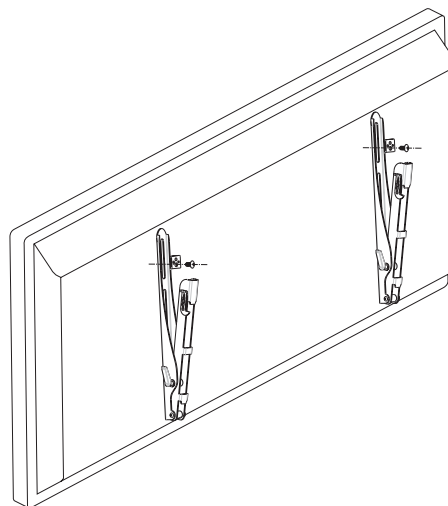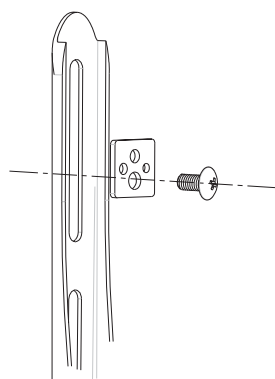


## 2. Placing and Fixing the Plasma Unit

- Using the Block ( Part18 ) provided in the package to fasten the Plasma Hook onto the bottom mounting holes of the display unit.  
**Three (3)** blocks to be used on each Plasma Hook, if necessary.

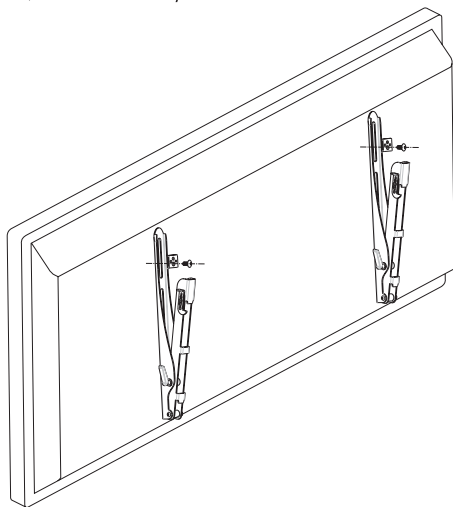


- Position and place the block along the groove on the Plasma Hook and tighten with the Truss Head Screw.

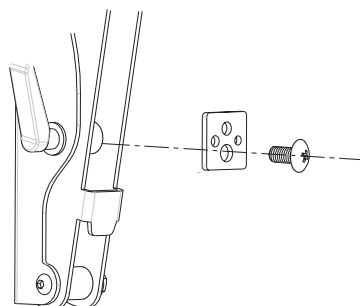

- Lift the display unit to the Cross Bar of the WallPlate, and then lower the unit into place until the Hooks are fully seated in the groove of the 'U' plate assembly.

⚠ To prevent interruption when placing the unit, use cable ties to secure the power cord and signal cables behind the unit.

- Check the viewing angle.  
If the viewing angle is not in desired position, adjust the Angle Adjustable Plate by loosening the Pivot Arm Assembly.

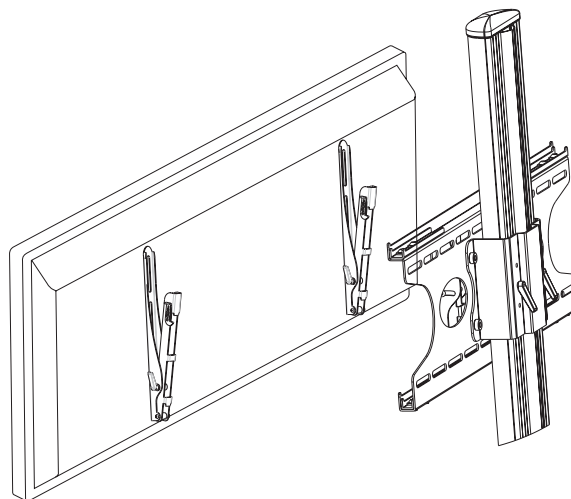

**Note:** Do consult our qualified and authorized service technicians should you encounter any technical difficulties. We are not liable for any damage or injury arising from any improper installation or mishandling.

***Enjoy your plasma display unit!***



All Rights Reserved. Unauthorized Copying and Reproduction are prohibited.